

TigerSwitch 10/100

48-Port Fast Ethernet Switch

- ◆ 48 10BASE-T/100BASE-TX ports
- ◆ Optional 100BASE-FX or 1000BASE-SX modules
- ◆ 13.6 Gbps of aggregate bandwidth
- ◆ Support for redundant power unit
- ◆ Spanning Tree Protocol
- ◆ Up to eight port trunks per switch
- ◆ Port mirroring for non-intrusive analysis
- ◆ QoS support for two-level priority
- ◆ Full support for VLANs with GVRP
- ◆ IP Multicasting with IGMP Snooping
- ◆ Manageable via console, Web, SNMP/RMON



TigerSwitch 10/100 Installation Guide

From SMC's Tiger line of feature-rich workgroup LAN solutions

SMC®

Networks

6 Hughes

Irvine, CA 92618

Phone: (949) 707-2400

December 2000

Pub. # F2.22 150550-102 R01

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2000 by
SMC Networks, Inc.
6 Hughes
Irvine, CA 92618
All rights reserved. Printed in Taiwan

Trademarks:

SMC is a registered trademark; and EZ Switch, TigerStack and TigerSwitch are trademarks of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

Limited Warranty

Limited Warranty Statement: SMC Networks, Inc. ("SMC") warrants its products to be free from defects in workmanship and materials, under normal use and service, for the applicable warranty term. All SMC products carry a standard 90-day limited warranty from the date of purchase from SMC or its Authorized Reseller. SMC may, at its own discretion, repair or replace any product not operating as warranted with a similar or functionally equivalent product, during the applicable warranty term. SMC will endeavor to repair or replace any product returned under warranty within 30 days of receipt of the product.

The standard limited warranty can be upgraded to a Limited Lifetime* warranty by registering new products within 30 days of purchase from SMC or its Authorized Reseller. Registration can be accomplished via the enclosed product registration card or online via the SMC web site. Failure to register will not affect the standard limited warranty. The Limited Lifetime warranty covers a product during the Life of that Product, which is defined as the period of time during which the product is an "Active" SMC product. A product is considered to be "Active" while it is listed on the current SMC price list. As new technologies emerge, older technologies become obsolete and SMC will, at its discretion, replace an older product in its product line with one that incorporates these newer technologies. At that point, the obsolete product is discontinued and is no longer an "Active" SMC product. A list of discontinued products with their respective dates of discontinuance can be found at http://www.smc.com/smc/pages_html/support.html.

All products that are replaced become the property of SMC. Replacement products may be either new or reconditioned. Any replaced or repaired product carries either a 30-day limited warranty or the remainder of the initial warranty, whichever is longer. SMC is not responsible for any custom software or firmware, configuration information, or memory data of Customer contained in, stored on, or integrated with any products returned to SMC pursuant to any warranty. Products returned to SMC should have any customer-installed accessory or add-on components, such as expansion modules, removed prior to returning the product for replacement. SMC is not responsible for these items if they are returned with the product.

Customers must contact SMC for a Return Material Authorization number prior to returning any product to SMC. Proof of purchase may be required. Any product returned to SMC without a valid Return Material Authorization (RMA) number clearly marked on the outside of the package will be returned to customers at customer's expense. For warranty claims within North America, please call our toll-free customer support number at (800) 762-4968. Customers are responsible for all shipping charges from their facility to SMC. SMC is responsible for return shipping charges from SMC to customer.

WARRANTIES EXCLUSIVE: IF AN SMC PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT OF THE PRODUCT IN QUESTION, AT SMC'S OPTION. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU

LIMITED WARRANTY

OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SMC NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. SMC SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: IN NO EVENT, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), SHALL SMC BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE, LOSS OF BUSINESS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF SMC OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. NOTHING IN THIS WARRANTY SHALL BE TAKEN TO AFFECT YOUR STATUTORY RIGHTS.

* SMC will provide warranty service for one year following discontinuance from the active SMC price list. Under the limited lifetime warranty, internal and external power supplies, fans, and cables are covered by a standard one-year warranty from date of purchase.

SMC Networks, Inc.
6 Hughes
Irvine, CA 92618

COMPLIANCES

FCC - Class A

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart B of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference. You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

You may use unshielded twisted-pair (UTP) cable for RJ-45 connections—Category 3 or greater for 10 Mbps connections and Category 5 for 100 Mbps connections. Use 50/125 or 62.5/125 micron multimode fiber optic cable for SC or ST-type connections.

- Warnings**
1. Wear an anti-static wrist strap or take other suitable measures to prevent electrostatic discharge when handling this equipment.
 2. When connecting this hub to a power outlet, connect the field ground lead on the tri-pole power plug to a valid earth ground line to prevent electrical hazards.

EC Conformance Declaration - Class A

SMC contact for these products in Europe is:

SMC Networks Europe,
Edificio Conata II,
Calle Fructuós Gelabert 6-8, 2^a, 4^a,
08970 - Sant Joan Despí,
Barcelona, Spain.

This information technology equipment complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC, and carries the CE Mark accordingly. It conforms to the following specifications:

EMC: EN55022 (1988)/CISPR-22 (1995) Class A	
IEC 1000-4-2	4 kV CD, 8 kV AD
IEC 1000-4-3 (1995)	3 V/m
IEC 1000-4-4 (1995)	1.0 kV - (power line) 0.5 kV - (signal line)
IEC 1000-4-6 (1995)	3 Vrms

Industry Canada - Class A

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe A prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par le ministère des Communications.

Japan VCCI Class A

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Taiwan BSMI Class A

警告使用者：這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Australia AS/NZS 3548 (1995) - Class A



ACN 069 351 613

SMC contact for products in Australia is:

SMC Communications Pty. Ltd.
Suite 18, 12 Tryon Road,
Lindfield NSW2070,
Phone: 61-2-94160437
Fax: 61-2-94160474

Safety Compliance

Warning: Fiber Optic Port Safety



When using a fiber optic port, never look at the transmit laser while it is powered on. Also, never look directly at the fiber TX port and fiber cable ends when they are powered on.

Avertissement: Ports pour fibres optiques - sécurité sur le plan optique



Ne regardez jamais le laser tant qu'il est sous tension. Ne regardez jamais directement le port TX (Transmission) à fibres optiques et les embouts de câbles à fibres optiques tant qu'ils sont sous tension.

Warnhinweis: Faseroptikanschlüsse - Optische Sicherheit



Niemals ein Übertragungslaser betrachten, während dieses eingeschaltet ist. Niemals direkt auf den Faser-TX-Anschluß und auf die Faserkabelenden schauen, während diese eingeschaltet sind.

Underwriters Laboratories Compliance Statement

Important! Before making connections, make sure you have the correct cord set. Check it (read the label on the cable) against the following:

Operating Voltage	Cord Set Specifications
120 Volts	UL Listed/CSA Certified Cord Set
	Minimum 18 AWG
	Type SVT or SJT three conductor cord
	Maximum length of 15 feet
	Parallel blade, grounding type attachment plug rated 15A, 125V
240 Volts (Europe only)	Cord Set with H05VV-F cord having three conductors with minimum diameter of 0.75 mm ²
	IEC-320 receptacle
	Male plug rated 10A, 250V

The unit automatically matches the connected input voltage. Therefore, no additional adjustments are necessary when connecting it to any input voltage within the range marked on the rear panel.

Wichtige Sicherheitshinweise (Germany)

1. Bitte lesen Sie diese Hinweise sorgfältig durch.
2. Heben Sie diese Anleitung für den späteren Gebrauch auf.
3. Vor jedem Reinigen ist das Gerät vom Stromnetz zu trennen. Verwenden Sie keine Flüssigoder Aerosolreiniger. Am besten eignet sich ein angefeuchtetes Tuch zur Reinigung.
4. Die Netzanschlusßsteckdose soll nahe dem Gerät angebracht und leicht zugänglich sein.
5. Das Gerät ist vor Feuchtigkeit zu schützen.
6. Bei der Aufstellung des Gerätes ist auf sicheren Stand zu achten. Ein Kippen oder Fallen könnte Beschädigungen hervorrufen.
7. Die Belüftungsöffnungen dienen der Luftzirkulation, die das Gerät vor Überhitzung schützt. Sorgen Sie dafür, daß diese Öffnungen nicht abgedeckt werden.
8. Beachten Sie beim Anschluß an das Stromnetz die Anschlußwerte.
9. Verlegen Sie die Netzanschlusßleitung so, daß niemand darüber fallen kann. Es sollte auch nichts auf der Leitung abgestellt werden.
10. Alle Hinweise und Warnungen, die sich am Gerät befinden, sind zu beachten.
11. Wird das Gerät über einen längeren Zeitraum nicht benutzt, sollten Sie es vom Stromnetz trennen. Somit wird im Falle einer Überspannung eine Beschädigung vermieden.
12. Durch die Lüftungsöffnungen dürfen niemals Gegenstände oder Flüssigkeiten in das Gerät gelangen. Dies könnte einen Brand bzw. elektrischen Schlag auslösen.
13. Öffnen sie niemals das Gerät. Das Gerät darf aus Gründen der elektrischen Sicherheit nur von autorisiertem Servicepersonal geöffnet werden.
14. Wenn folgende Situationen auftreten ist das Gerät vom Stromnetz zu trennen und von einer qualifizierten Servicestelle zu überprüfen:
 - a. Netzkabel oder Netzstecker sind beschädigt.
 - b. Flüssigkeit ist in das Gerät eingedrungen.
 - c. Das Gerät war Feuchtigkeit ausgesetzt.
 - d. Wenn das Gerät nicht der Bedienungsanleitung entsprechend funktioniert oder Sie mit Hilfe dieser Anleitung keine Verbesserung erzielen.
 - e. Das Gerät ist gefallen und/oder das Gehäuse ist beschädigt.
 - f. Wenn das Gerät deutliche Anzeichen eines Defektes aufweist.
15. Zum Netzanschluß dieses Gerätes ist eine geprüfte Leitung zu verwenden. Für einen Nennstrom bis 6A und einem Gerätegewicht größer 3kg ist eine Leitung nicht leichter als H05VV-F, 3G, 0.75mm² einzusetzen.

Der arbeitsplatzbezogene Schalldruckpegel nach DIN 45 635 Teil 1000 beträgt 70dB(A) oder weniger.

TABLE OF CONTENTS

1

About the

TigerSwitch 10/100 1-1

Overview	1-1
Switch Architecture	1-2
Management Options	1-3
Description of Hardware	1-3
10BASE-T/100BASE-TX Ports (SMC6948L2)	1-3
Status LEDs	1-4
Network Management Module	1-5
Spanning Tree Protocol	1-6
VLANs	1-6
Multicast Switching	1-7
Traffic Priority	1-7
Optional Media Extender Modules	1-7
Optional Redundant Power Unit (SMCRPU150W)	1-8
Power Supply Receptacles	1-8
Features and Benefits	1-9
Connectivity	1-9
Expandability	1-9
Performance	1-10
Management	1-10

2

Network Planning 2-1

Introduction to Switching	2-1
Sample Applications	2-2
Collapsed Backbone	2-2
Central Wiring Closet	2-3
Remote Connections with Fiber Cable	2-4
Making VLAN Connections	2-5
Connectivity Rules	2-6
1000 Mbps Gigabit Ethernet Collision Domain	2-6
Maximum Fiber Optic Cable Distance for 1000BASE-SX	2-6

TABLE OF CONTENTS

100 Mbps Fast Ethernet Collision Domain	2-7
SMC 3-2 Rule for Class II Repeaters	2-7
SMC 2-1 Rule for Class I Repeaters	2-7
Maximum Network Diameter Using Repeaters	2-7
Maximum Fast Ethernet Cable Distance	2-7
10 Mbps Ethernet Collision Domain	2-8
SMC 5-4-3 Rule	2-8
Maximum Ethernet Cable Distance	2-8
Application Notes	2-9

3

Installing the Switch 3-1

Selecting a Site	3-1
Equipment Checklist	3-2
Package Contents	3-2
Optional Rack-Mounting Equipment	3-2
Mounting	3-3
Rack Mounting	3-3
Desktop or Shelf Mounting	3-5
Connecting to a Power Source	3-6

4

Making Network Connections 4-1

Connecting Network Devices	4-1
Connecting to PCs, Servers, Hubs and Switches	4-2
Wiring Closet Connections	4-3
Fiber Optic Devices	4-4

A

Troubleshooting A-1

Diagnosing Switch Indicators	A-1
Power and Cooling Problems	A-2
Installation	A-2
In-Band Access	A-2

B

Cables B-1

Specifications	B-1
Twisted-Pair Cable and Pin Assignments	B-2
100BASE-TX/10BASE-T Pin Assignments	B-3
Straight-Through Wiring	B-3
Crossover Wiring	B-4
Console Port Pin Assignments	B-5
DB-9 Port Pin Assignments	B-6
Console Port to 9-Pin COM Port on PC	B-6
Console Port to 25-Pin DCE Port on Modem	B-6
Console Port to 25-Pin DTE Port on PC	B-7

C

Specifications C-1

Physical Characteristics	C-1
Switch Features	C-3
Management Features	C-4
Standards	C-5
Compliances	C-5
Warranty	C-6
Slide-in Module	C-7
100BASE-FX Extender Module	C-7
1000BASE-SX Extender Module	C-7
Network Management Module	C-8

D

Ordering Information D-1

Glossary

Index

TABLE OF CONTENTS

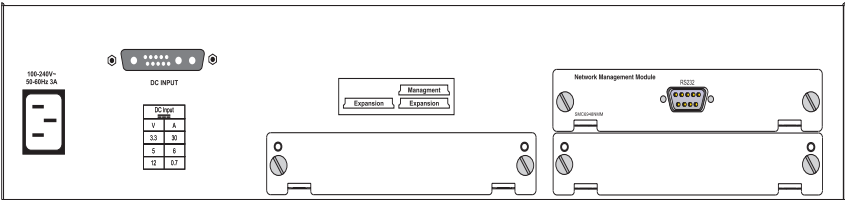


Figure 1-2. Rear Panel

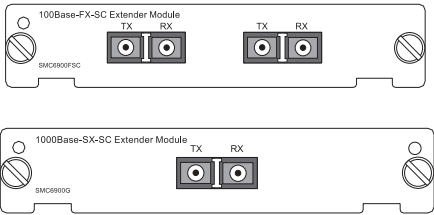


Figure 1-3. Optional 100BASE-FX and 1000BASE-SX Modules

Switch Architecture

The TigerSwitch employs a high-speed switching fabric. This design allows for simultaneous transport of multiple packets at low latency on all ports. It also uses store-and-forward switching to ensure maximum data integrity. In this mode, the entire packet must be received into a port buffer and checked for validity before being forwarded. This prevents errors from being propagated throughout the network. This switch also features full-duplex capability on all ports, which effectively doubles the bandwidth of each connection.

This TigerSwitch can be used in a standalone configuration, supporting up to 52 ports. Moreover, you can use a 100 Mbps fiber module for connecting to a remote site, or a Gigabit module for a high-speed backbone connection.

Management Options

This switch contains a comprehensive array of LEDs for “at-a-glance” monitoring of network and port status. It also includes a Network Management Module that allows the switch to be managed in-band via SNMP or RMON (Groups 1, 2, 3 and 9) protocols, with a Web browser, or remotely via Telnet. The switch also provides a serial port on the rear panel for out-of-band management.

There is also support for a Redundant Power Unit to ensure continuous operation in the event of a power failure.

Description of Hardware

10BASE-T/100BASE-TX Ports (SMC6948L2)

These ports are dual-speed RJ-45 ports with built-in wiring crossovers (MDI-X). Workstations and servers can be connected to these ports with straight-through cable. When connecting to another switch or a hub, you can use straight-through cable to connect to a port on the attached device that does not have built-in wiring crossovers (MDI), or use crossover cabling. (See Appendix B for a pinout description of crossover cable.)

Each of these ports support auto-negotiation, so the optimum transmission mode (half or full duplex), and data rate (10 or 100 Mbps) can be selected automatically. If a device connected to one of these ports does not support auto-negotiation, the communication mode of that port can be configured manually. Each port also supports IEEE 802.3x auto-negotiation of full-duplex flow control, so the switch can automatically prevent port buffers from becoming saturated.

Status LEDs

The LEDs, which are located on the front panel for easy viewing, are shown below and described in the following table.

Port and System Status LEDs		
LED	Condition	Status
Power	On	Switch is receiving power.
RDP	On	Redundant power is on, and the RPU is in backup or active mode.
	Off	Redundant power is off or has failed.
Mgmt	On	Agent is operational.
RJ-45 Ports		
Link	On Amber	Port has established a valid 10 Mbps connection.
	On Green	Port has established a valid 100 Mbps connection.
	Flashing	Port has been partitioned due to an abnormal network condition, or manually disabled.
Act*	On	Traffic is passing through the port.
FDX*	On	Port is operating at full duplex.
	Off	Port is operating at half duplex.
FC*	On	Flow control enabled.

* Use the Mode Select button to select the LED display mode.

Network Management Module

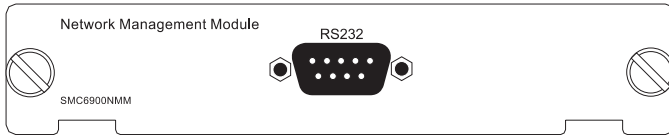


Figure 1-4. Network Management Module

This switch includes a Network Management Module on the rear panel. It offers a variety of management options, including SNMP, RMON and a Web-based interface. This module also includes an RS-232 port for out-of-band management. This is an RS-232 serial port with a DB-9 connector. A PC may be connected to this port for configuration and monitoring purposes out-of band via a full-handshaking null-modem cable. You can also make a remote connection to this port via modems. This allows you to access the out-of-band interface. (See Appendix B for a description of wiring options.)

The Network Management Module provides a wide range of advanced performance-enhancing features. Multicast filtering provides support for real-time network applications. Port-based and tagged VLANs, plus support for automatic GVRP VLAN registration provide traffic security and efficient use of network bandwidth. QoS priority queueing ensures the minimum delay for moving real-time multimedia data across the network. Flow control eliminates the loss of packets due to bottlenecks caused by port saturation. And broadcast storm control prevents broadcast traffic storms from engulfing the network.

Some of this switch's advanced features are described below. For a detailed description, refer to the Management Guide.

Spanning Tree Protocol

The TigerSwitch 10/100 supports IEEE 802.1D Spanning Tree Protocol. This protocol adds a level of fault tolerance by allowing two or more redundant connections to be created between a pair of LAN segments. When there are multiple physical paths between segments, this protocol will choose a single path and disable all others to ensure that only one route exists between any two stations on the network. This prevents the creation of network loops. However, if the chosen path should fail for any reason, an alternate path will be activated to maintain the connection.

The default setting for the Spanning Tree Protocol is “enabled.” This protocol may be configured out-of-band via the serial console port, or in-band via the Web interface, Telnet, or SNMP network management software.

VLANs

The TigerSwitch 10/100 supports up to 256 VLANs. A Virtual LAN is a collection of network nodes that share the same collision domain regardless of their physical location or connection point in the network. By segmenting your network into VLANs, you can:

- Eliminate broadcast storms which severely degrade performance in a flat network.
- Simplify network management for node changes/moves by remotely configuring VLAN membership for any port, rather than having to manually change the node's IP address.
- Provides data security by restricting all traffic to the originating VLAN, except where a connection has been configured between separate VLANs using a router or Layer 3 switch.

Multicast Switching

Specific multicast traffic can be assigned to its own VLAN to ensure that it does not interfere with normal network traffic and to guarantee real-time delivery by setting the required priority level for the designated VLAN. The switch uses IGMP Snooping and IGMP to manage multicast group registration.

Traffic Priority

This switch provides Quality of Service (QoS) by prioritizing each packet based on the required level of service, using two distinct categories with Weighted Fair Queuing. It uses IEEE 802.1p and 802.1Q tags to prioritize incoming traffic based on input from the end-station application. These functions can be used to provide independent priorities for delay-sensitive data and best-effort data.

Optional Media Extender Modules

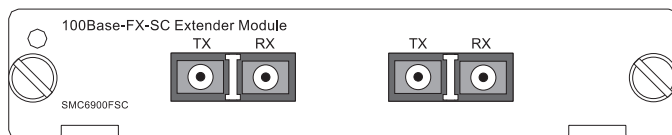


Figure 1-5. 2-Port 100BASE-FX Fiber Module (SMC6900FSC)

Using fiber optic cable, the 100BASE-FX port can be connected to a remote site up to 2 km (1.24 miles) away. This port operates only at 100 Mbps, full duplex. This module is fitted with an SC connector, but you can attach an ST plug to the switch using the optional SC-ST Converter (Part Number: 99-012034-091).

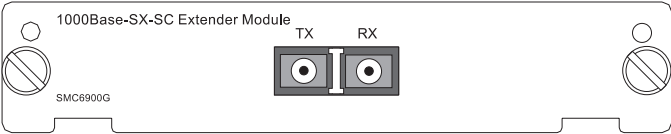


Figure 1-6. Single-Port 1000BASE-SX Module (SMC6900G)

Using fiber optic cable, the 1000BASE-SX port can be connected to a remote site up to 550 m (1805 ft) away. The 1000BASE-SX Gigabit module operates at 1 Gbps, with support for auto-negotiation of duplex mode and flow control. This module is fitted with an SC connector, but you can attach an ST plug to the switch using the SC-ST Converter (Part Number: 99-012034-091)..

Optional Redundant Power Unit (SMCRPU150W)

SMC provides an optional Redundant Power Unit (RPU), SMCRPU150W, that can supply power to the switch in the event of failure of the internal power supply.

Power Supply Receptacles

There are two power receptacles on the rear panel of the switch. The standard power receptacle is for the AC power cord. The receptacle labeled “DC Input” is for the optional Redundant Power Unit (RPU).

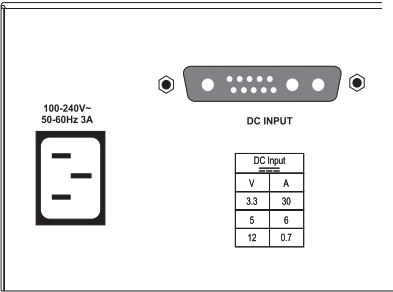


Figure 1-7. Power Supply Receptacles

Features and Benefits

Connectivity

- ◆ 48 dual-speed ports for easy Fast Ethernet integration and for protection of your investment in legacy LAN equipment
- ◆ Auto-negotiation enables each RJ-45 port to automatically select the optimum communication mode (half or full duplex) if this feature is supported by the attached device; otherwise the port can be configured manually
- ◆ Independent RJ-45 10BASE-T/100BASE-TX ports with built-in wiring crossovers for straight-through cable connections
- ◆ Unshielded (UTP) cable supported on all RJ-45 ports: Category 3, 4 or 5 for 10 Mbps connections and Category 5 for 100 Mbps connections
- ◆ IEEE 802.3 Ethernet and 802.3u Fast Ethernet compliance ensures compatibility with standards-based hubs, network cards and switches from any vendor

Expandability

- ◆ Optional 100BASE-FX fiber module (SC connector) which can connect to a remote site up to 2 kilometers away (at full duplex)
- ◆ Optional 1000BASE-SX Gigabit module that can run up to 550 meters (using 50/125 micron, 500 MHz/km fiber cable), and operates at 1 Gbps, half or full duplex, with auto-negotiation for duplex mode and flow control

Performance

- ◆ Transparent bridging
- ◆ Aggregate bandwidth up to 13.6 Gbps
- ◆ Switching Table with 12K MAC address entries
- ◆ Filtering and forwarding at line speed
- ◆ Broadcast storm control
- ◆ Includes support for an optional Redundant Power Unit
- ◆ Desktop or rack-mountable
- ◆ Limited lifetime warranty

Management

- ◆ “At-a-glance” LEDs for easy troubleshooting
- ◆ Network Management Module:
 - Supports Telnet, SNMP/RMON and Web-based interface
 - Module manages entire switch in-band or out-of-band
 - Spanning Tree Protocol for redundant network connections
 - VLAN support for 256 groups, port-based or with 802.1Q VLAN tagging, and GVRP for automatic VLAN learning
 - Quality of Service (QoS) supports two levels of priority and Weighted Fair Queueing
 - Multicast Switching based on IGMP (Internet Group Management Protocol) Snooping and Multicast Filtering

CHAPTER 2

NETWORK PLANNING

Introduction to Switching

A network switch allows simultaneous transmission of multiple packets via non-crossbar switching. This means that it can partition a network more efficiently than bridges or routers. The switch has, therefore, been recognized as one of the most important building blocks for today's networking technology.

When performance bottlenecks are caused by congestion at the network access point (such as the network card for a high-volume file server), the device experiencing congestion (server, power user or hub) can be attached directly to a switched port. And, by using full-duplex mode, the bandwidth of the dedicated segment can be doubled to maximize throughput.

When networks are based on repeater (hub) technology, the maximum distance between end stations is limited. For Ethernet, there may be up to four hubs between any pair of stations; for Fast Ethernet, the maximum is two. This is known as the hop count. However, a switch turns the hop count back to zero. So subdividing the network into smaller and more manageable segments, and linking them to the larger network by means of a switch, removes this limitation.

A switch can be easily configured in any Ethernet or Fast Ethernet network to significantly boost bandwidth while using conventional cabling and network cards.

Sample Applications

The TigerSwitch 10/100 is not only designed to segment your network, but also to provide a wide range of options in setting up network connections. Some typical applications are described below.

Collapsed Backbone

The TigerSwitch 10/100 is an excellent choice for mixed Ethernet and Fast Ethernet installations where significant growth is expected in the near future. You can easily build on this basic configuration, adding direct full-duplex connections to workstations or servers. When the time comes for further expansion, just cascade the TigerSwitch to an Ethernet or Fast Ethernet hub or switch, or link to another workgroup using a Gigabit connection.

In the figure below, the TigerSwitch 10/100 is operating as a collapsed backbone for a small LAN. It is providing dedicated 20 Mbps full-duplex connections to workstations and 200 Mbps full-duplex connections to power users and servers.

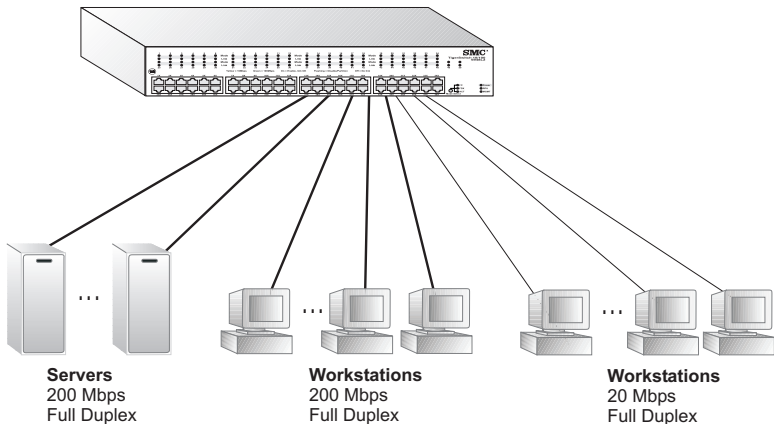


Figure 2-1. Collapsed Backbone

Central Wiring Closet

With up to 52 ports on the switch, the TigerSwitch 10/100 can collapse a complex network down into a single efficient bridged node, increasing overall bandwidth and throughput.

In the figure below, the 10BASE-T/100BASE-TX ports on the TigerSwitch are providing 100 Mbps connectivity for up to 48 segments through SMC's TigerStack™ II 10/100 hubs. In addition, the switch is also connecting servers at 200 Mbps.

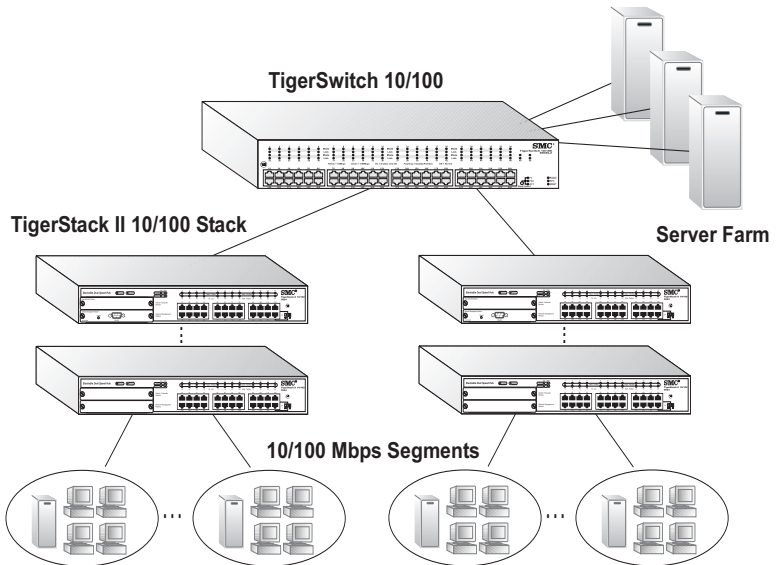


Figure 2-2. Central Wiring Closet

Remote Connections with Fiber Cable

Fiber optic technology allows for longer cabling than any other media type (up to 2 kilometers for 100 Mbps fiber at full duplex, or up to 550 meters for 1 Gbps fiber). The TigerSwitch can serve as a collapsed backbone, providing direct connectivity for a widespread LAN. The 100 Mbps fiber modules (with two ports per module) can be used to interconnect remote Fast Ethernet segments. While the Gigabit module can be used for a high-speed connection between floors in the same building, or to connect to other buildings in a campus setting. The figure below illustrates a TigerSwitch connecting multiple segments with fiber cable.

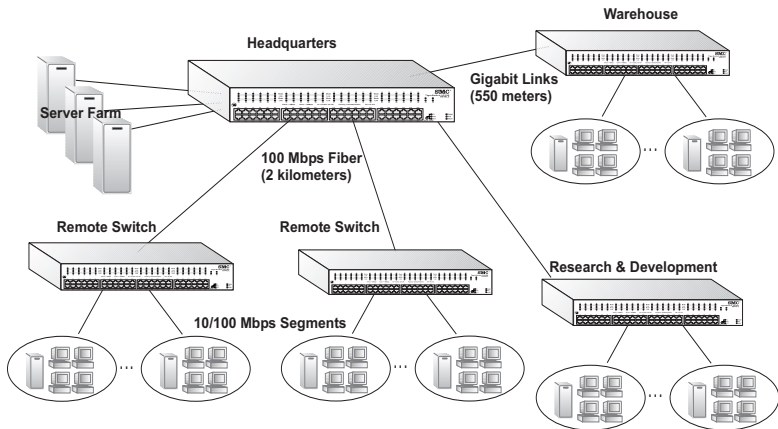


Figure 2-3. Collapsed Backbone Using Fiber Cable

Making VLAN Connections

VLANs can be based on port groups, or each data frame can be explicitly tagged to identify the VLAN group it belongs to. When using port-based VLANs, ports can either be assigned to any number of groups. Port-based VLANs are suitable for small networks. A single switch can be easily configured to support several VLAN groups for various organizational entities (such as Finance and Marketing).

When you expand port-based VLANs across several switches, you need to make a separate connection for each VLAN group. This approach is, however, inconsistent with the Spanning Tree Protocol, which can easily segregate ports that belong to the same VLAN. When VLANs cross separate switches, it is therefore better to use VLAN tagging. This allows you to assign multiple VLAN groups to the “trunk” ports (that is, tagged ports) connecting different switches.

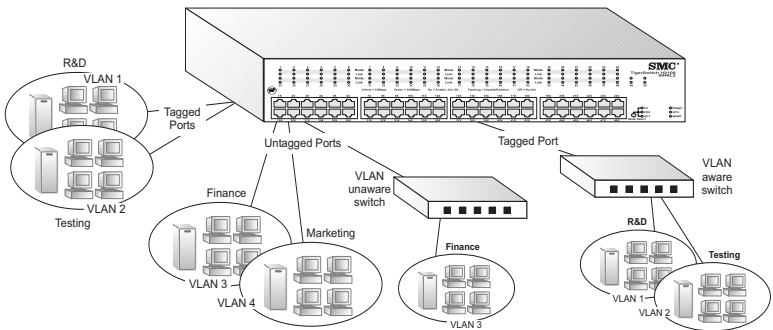


Figure 2-4. Making VLAN Connections

Note: When connecting to a switch that does not support IEEE 802.1Q VLAN tags, use untagged ports.

Connectivity Rules

When adding hubs (repeaters) to your network, please follow the connectivity rules listed below for Ethernet, Fast Ethernet, or Gigabit Ethernet. However, note that because switches break up the path for connected devices into separate collision domains, you should not include the switch or connected cabling in your calculations for cascade length involving other devices.

1000 Mbps Gigabit Ethernet Collision Domain

Maximum Fiber Optic Cable Distance for 1000BASE-SX

Fiber Size	Fiber Bandwidth	Maximum Cable Length
62.5/125 micron	160 MHz/km	7-722 ft. (2-220 m)
	200 MHz/km	7-902 ft. (2-275 m)
50/125 micron	400 MHz/km	7-1641 ft. (2-500 m)
	500 MHz/km	7-1805 ft. (2-550 m)

Note: Although maximum cable length for 100BASE-FX fiber depends on the duplex mode, the maximum length for 1000BASE-SX fiber is the same for both half and full duplex.

100 Mbps Fast Ethernet Collision Domain

SMC 3-2 Rule for Class II Repeaters

Between any two PCs or other stations in the same 100BASE-TX collision domain, there may be:

- up to 3 link segments and
- up to 2 Class II repeaters (hubs)

SMC 2-1 Rule for Class I Repeaters

Between any two PCs or other stations in the same 100BASE-TX collision domain, there may be:

- up to 2 link segments and
- up to 1 Class I repeater (hub)

Maximum Network Diameter Using Repeaters

Repeater Type and Number	Twisted Pair 100BASE-TX
1 Class I	200 m (656 ft.)
1 Class II	200 m (656 ft.)
2 Class II	205 m (672.4 ft.)

Maximum Fast Ethernet Cable Distance

Cable Type	Connecting	Max. Distance
Twisted Pair	Any two devices	100 m (328 ft.)
Fiber	Switch to switch, server or PC	
	Half duplex	412 m (1,351.4 ft.)
	Full duplex	2 km (1.24 mi.)

10 Mbps Ethernet Collision Domain

SMC 5-4-3 Rule

Between any two PCs or other stations in the same 10 Mbps collision domain, there may be:

- up to 5 link segments in series,
- up to 4 repeaters (hubs),
- up to 3 populated cable segments, that is, segments attached to two or more PCs (coax networks only).*

* The remaining two segments are unpopulated; these are known as inter-repeater links or IRLs. This distinction between populated and unpopulated segments is significant for coax networks only.

Maximum Ethernet Cable Distance

Cable Type	Maximum Length
Twisted Pair, Categories 3, 4, 5	100 m (328 ft.)
Thin Coax	185 m (607 ft.)
External Transceiver Drop	50 m (165 ft.)

Application Notes

1. Full-duplex operation only applies to point-to-point access (such as when a switch is attached to a workstation, server or another switch). When the switch is connected to a hub, both devices must operate in half-duplex mode.
2. When a switch is connected to a hub or any kind of shared media, remember to turn off back pressure to prevent the attached port from being frequently partitioned due to the jamming packets.
3. For network applications that require routing (such as when interconnecting dissimilar network types or distinct VLANs), you may have to attach the TigerSwitch 10/100 units directly to a router or Layer 3 switch (such as the SMC6724ML3).

CHAPTER 3

INSTALLING THE SWITCH

Selecting a Site

TigerSwitch 10/100 units can be mounted in a standard 19-inch equipment rack or on a flat surface. Be sure to follow the guidelines below when choosing a location.

- ◆ The site should:
 - be at the center of all the devices you want to link and near a power outlet.
 - be able to maintain its temperature within 0° to 50° C and its humidity within 5% to 95%, non-condensing
 - provide adequate space (approximately two inches) on all sides for proper air flow
 - be accessible for installing, cabling and maintaining the devices
 - allow the status LEDs to be clearly visible
- ◆ Make sure twisted-pair cable is always routed away from power lines, fluorescent lighting fixtures and other sources of electrical interference, such as radios, transmitters, etc.
- ◆ Make sure that a separate grounded power outlet that provides 100 to 240 VAC, 50 to 60 Hz, is within 8 feet of each device and is powered from an independent circuit breaker. As with any equipment, using a filter or surge suppressor is recommended.

Equipment Checklist

After unpacking the TigerSwitch 10/100, check the contents to be sure you have received all the components. Then, before beginning the installation, be sure you have all other necessary installation equipment.

Package Contents

- ◆ TigerSwitch 10/100 unit, SMC6948L2
- ◆ Four adhesive foot pads
- ◆ Bracket Mounting Kit containing two brackets and four screws for attaching the brackets to the switch
- ◆ Power Cord—either US, Continental Europe or UK
- ◆ RS-232 console cable
- ◆ This Installation Guide
- ◆ Management Guide
- ◆ SMC Warranty Registration Card—be sure to complete and return to SMC

Optional Rack-Mounting Equipment

If you plan to rack-mount the switch, be sure to have the following equipment available:

- ◆ Four mounting screws for each device you plan to install in a rack—these are not included
- ◆ A screwdriver (Phillips or flathead, depending on the type of screws used)

Mounting

A TigerSwitch 10/100 unit can be mounted in a standard 19-inch equipment rack or on a desktop or shelf. Mounting instructions for each type of site follow.

Installing Optional Modules: Before mounting the switch, be sure you install any optional modules. If you have purchased an optional slide-in 100BASE-FX or 1000BASE-SX media expansion module, install these modules now, following the instructions included with the package.

Rack Mounting

Before rack mounting the switch, pay particular attention to the following factors:

- ◆ **Temperature:** Since the temperature within a rack assembly may be higher than the ambient room temperature, check that the rack-environment temperature is within the specified operating temperature range. (See page C-2.)
- ◆ **Mechanical Loading:** Do not place any equipment on top of a rack-mounted unit
- ◆ **Circuit Overloading:** Be sure that the supply circuit to the rack assembly is not overloaded.
- ◆ **Grounding:** Rack-mounted equipment should be properly grounded. Particular attention should be given to supply connections other than direct connections to the mains.

To rack-mount devices:

1. Attach the brackets to the device using the screws provided in the Bracket Mounting Kit.

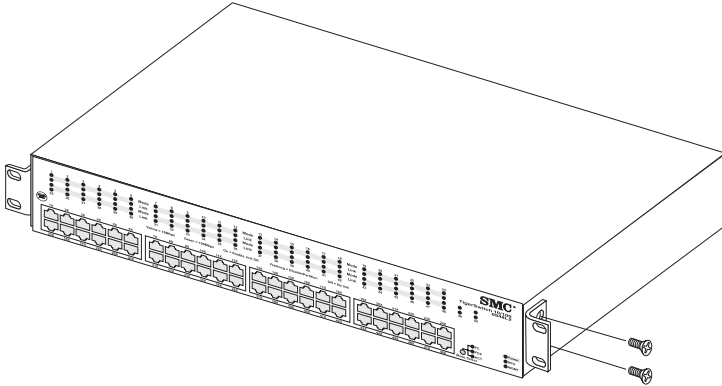


Figure 3-1. Attaching the Brackets

2. Mount the device in the rack, using four rack-mounting screws (not provided).

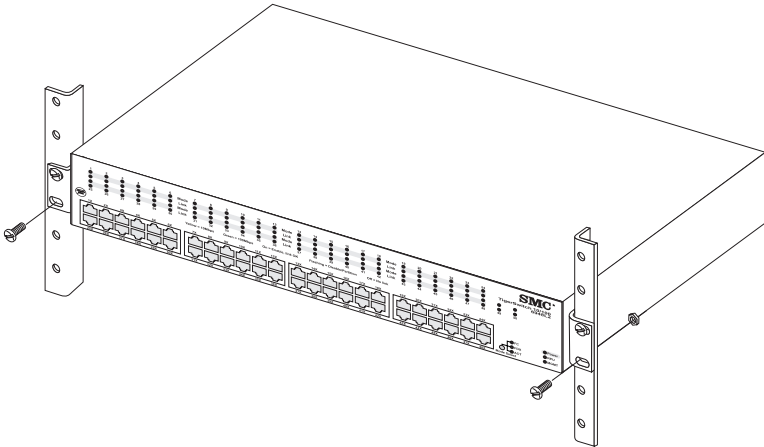


Figure 3-2. Installing the Switch in a Rack

3. If installing a single switch only, turn to “Connecting to a Power Source” at the end of this chapter.
4. If installing multiple switches, mount them in the rack, one below the other, in any order.
5. If also installing RPU, mount them in the rack below the other devices.

Desktop or Shelf Mounting

1. Attach the four adhesive feet to the bottom of the first switch.

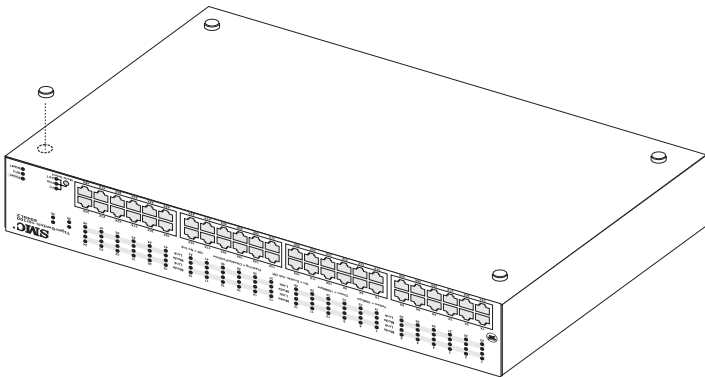


Figure 3-3. Attaching the Adhesive Feet

2. Set the device on a flat surface near an AC power source, making sure there are at least two inches of space on all sides for proper air flow.
3. If installing a single switch only, go to “Connecting to a Power Source” at the end of this chapter.
4. If installing multiple switches, attach four adhesive feet to each one. Place each device squarely on top of the one below, in any order.
5. If also installing RPU, place them close to the stack.

Connecting to a Power Source

To connect a device to a power source:

1. Insert the power cable plug directly into the receptacle located at the back of the device.

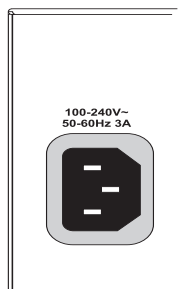


Figure 3-4. Power Receptacle

2. Plug the other end of the cable into a grounded, 3-pin socket.

Note: For International use, you may need to change the AC line cord. You must use a line cord set that has been approved for the receptacle type in your country.

3. Check the front-panel LEDs as the device is powered on to be sure the Power LED is lit. If not, check that the power cable is correctly plugged in. The Mgmt LED on the switch will be lit.
4. If you have a purchased Redundant Power Unit, connect it to the device and to an AC power source now, following the instructions included with the package.

CHAPTER 4

MAKING NETWORK CONNECTIONS

Connecting Network Devices

The TigerSwitch 10/100 is designed to interconnect multiple segments (or collision domains). It may be connected to 10 or 100 Mbps network cards in PCs and servers, as well as to Ethernet and Fast Ethernet hubs, switches or routers. It may also be connected to remote devices using the optional 100BASE-FX or 1000BASE-SX modules.

Note: Before connecting cables, you may want to first configure the Spanning Tree Protocol to avoid network loops. Refer to the Management Guide for more information.

Connecting to PCs, Servers, Hubs and Switches

1. Attach one end of a twisted-pair cable segment to the device's RJ-45 connector.

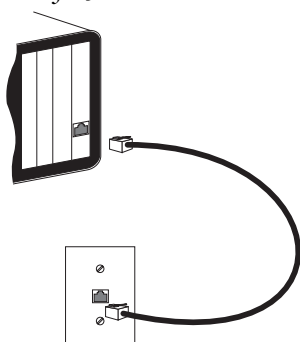


Figure 4-1. Making Twisted-Pair Connections

2. If the device is a network card and the TigerSwitch is in the wiring closet, attach the other end of the cable segment to a modular wall outlet that is connected to the wiring closet (see “Wiring Closet Connections” on the next page). Otherwise, attach the other end to an available port on the switch.

If the device is a hub or switch, use the cable type indicated under “Cables” on page B-1, and attach the other end to a port on the TigerSwitch.

Make sure each twisted pair cable does not exceed 100 meters (328 ft.) in length.

Note: When connected to a shared collision domain (such as a hub with multiple workstations), switch ports must be set to half-duplex mode and back pressure flow control disabled.

3. As each connection is made, the Link LED (on the TigerSwitch) corresponding to each port will light to indicate that the connection is valid.

Wiring Closet Connections

Today, the punch-down block is an integral part of many of the newer equipment racks. It is actually part of the patch panel. Instructions for making connections in the wiring closet with this type of equipment follows.

1. Attach one end of a patch cable to an available port on the switch, and the other end to the patch panel.
2. If not already in place, attach one end of a cable segment to the back of the patch panel where the punch-down block is located, and the other end to a modular wall outlet.
3. Label the cables to simplify future troubleshooting.

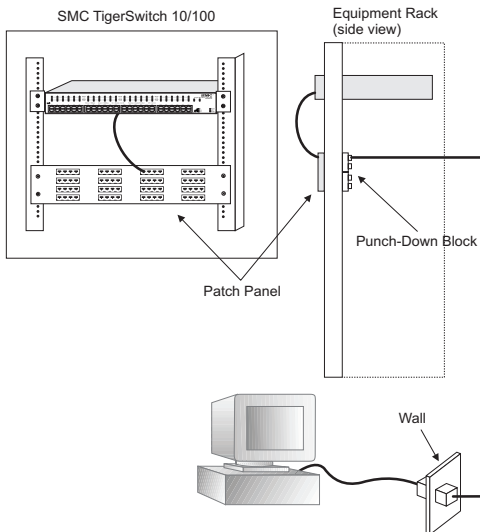


Figure 4-2. Wiring Closet Connections

Fiber Optic Devices

An optional slide-in 100BASE-FX module may be used for backbone and long distance connections. A 1000BASE-SX module may also be used for a backbone connection between switches, or for connecting to a high-speed server.

Each fiber optic port requires 50/125 or 62.5/125 micron multimode fiber optic cabling with an SC connector at both ends. If you need to connect to a device with 62.5/125 micron cable that has ST-type connectors, SMC provides an optional SC-ST Converter (Part Number: 99-012034-091).

Warning: This switch uses lasers to transmit signals over fiber optic cable. The lasers are compliant with the requirements of a Class 1 Laser Product and are inherently eye safe in normal operation. However, you should never look directly at a transmit port when it is powered on.

1. Remove and keep the SC port's rubber cover. When not connected to a fiber cable, the rubber cover should be replaced to protect the optics.
2. Check that the fiber terminators are clean. You can clean the cable plugs by wiping them gently with a clean tissue or cotton ball moistened with a little ethanol. Dirty fiber terminators on fiber optic cables will impair the quality of the light transmitted through the cable and lead to degraded performance on the port.
3. Connect one end of the cable to the SC port on the switch and the other end to the SC port on the other device. Since SC connectors are keyed, the cable can be attached in only one orientation.

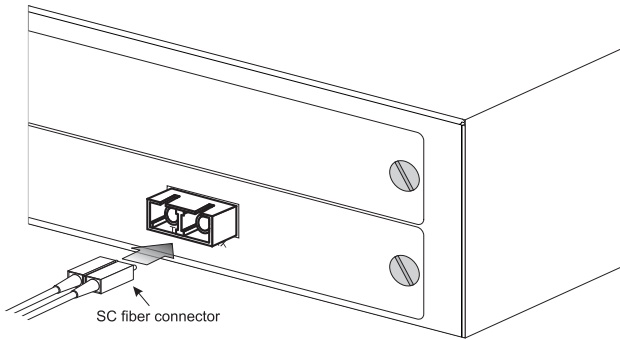


Figure 4-3. Making SC Port Connections

4. As a connection is made, check the Activity LED on the switch's front panel for the corresponding module to be sure that the connection is valid.

Note: If you use the optional SC-ST Converter, be sure to connect the converter's Tx (Rx) port to the Rx (Tx) port on the other device.

The 100BASE-FX fiber optic ports operate only at 100 Mbps, full duplex. You can run a fiber link up to 1.24 miles (2 kilometers). However, note that power budget constraints must also be considered when calculating the maximum cable length for your specific environment.

The 1000BASE-SX fiber optic ports operate at 1 Gbps full duplex, with auto-negotiation of flow control. The maximum length for fiber optic cable operating at Gigabit speed will depend on the fiber type as listed under "1000 Mbps Gigabit Ethernet Collision Domain" on page 2-6.

APPENDIX A

TROUBLESHOOTING

Diagnosing Switch Indicators

Troubleshooting Chart	
Symptom	Action
Power LED is Off	<ul style="list-style-type: none">• Internal or redundant power supply has failed or is disconnected.• Check connections between the switch, the power cord, the wall outlet, and the RPU if you are using one.• If the switch is installed in a rack, check the connections to the punch-down block and patch panel.• Contact SMC Tech Support.
Power LED is Flashing	<ul style="list-style-type: none">• The switch is either downloading firmware or running the Power-On Self-Diagnostics Test (POST). If this LED does not stop flashing, then POST has failed, and you should contact SMC Tech Support.
Link LED is Off	<ul style="list-style-type: none">• Verify that the switch and attached device are powered on.• Be sure the cable is plugged into both the switch and corresponding device.• Verify that the proper cable type is used and its length does not exceed specified limits.• Check the adapter on the attached device and cable connections for possible defects. Replace the defective adapter or cable if necessary.

Power and Cooling Problems

If the power indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or internal power supply. However, if the unit powers off after running for a while, check for loose power connections, power losses or surges at the power outlet, and verify that the fans on the unit are unobstructed and running prior to shutdown. If you still cannot isolate the problem, then the internal power supply may be defective. In this case, contact SMC Technical Support for assistance.

Installation

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (such as the power cord or network cabling), test them in an alternate environment where you are sure that all the other components are functioning properly.

In-Band Access

You can access the management agent in the switch from anywhere within the attached network using Telnet, a Web browser, or other network management software such as EliteView. However, you must first configure the switch with a valid IP address, subnet mask, and default gateway. If you have trouble establishing a link to the management agent, check to see if you have a valid network connection. Then verify that you entered the correct IP address. Also, be sure the port through which you are connecting to the switch has not been disabled. If it has not been disabled, then check the network cabling that runs between your remote location and the switch.

Note: You can configure the management agent to accept from one to four simultaneous Telnet sessions. If the maximum number of sessions already exists, an additional Telnet connection will not be able to log into the system.

APPENDIX B

CABLES

Specifications

10BASE-T Twisted-Pair Cable		
Cable Type	Category	Connector
100-ohm UTP, 22 - 26 AWG 0.4 - 0.6 mm, 2 pairs	3, 4, 5	male, 8-pin RJ-45

100BASE-TX Twisted-Pair Cable		
Cable Type	Category	Connector
100-ohm UTP, 22 - 26 AWG 0.4 - 0.6 mm, 2 pairs	5	male, 8-pin RJ-45

100BASE-FX and 1000BASE-SX Duplex Fiber Cable	
Cable Type	Connector
62.5/125 or 50/125 micron core	SC

Note: If you need to connect to a device with 62.5/125 micron cable that has ST-type connectors, SMC provides an optional SC-ST Converter (Part Number: 99-012034-091).

Twisted-Pair Cable and Pin Assignments

Caution: DO NOT plug a phone jack connector into any RJ-45 port. Use only twisted-pair cables with RJ-45 connectors that conform with FCC standards.

For 100BASE-TX/10BASE-T connections, a twisted-pair cable must have two pairs of wires. Each wire pair is identified by two different colors. For example, one wire might be red and the other, red with white stripes. Also, an RJ-45 connector must be attached to both ends of the cable.

Caution: Each wire pair must be attached to the RJ-45 connectors in a specific orientation. (See “Cables” on page B-1 for an explanation.)

Figure B-1 illustrates how the pins on the RJ-45 connector are numbered. Be sure to hold the connectors in the same orientation when attaching the wires to the pins.

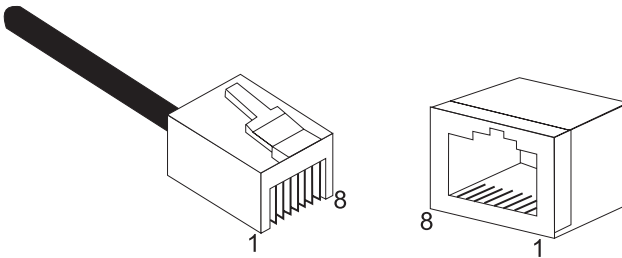


Figure B-1. RJ-45 Connector Pin Numbers

100BASE-TX/10BASE-T Pin Assignments

With 100BASE-TX/10BASE-T cable, pins 1 and 2 are used for transmitting data, and pins 3 and 6 for receiving data.

RJ-45 Pin Assignments	
Pin Number	Assignment¹
1	Tx+
2	Tx-
3	Rx+
6	Rx-

1: The “+” and “-” signs represent the polarity of the wires that make up each wire pair.

Straight-Through Wiring

If the twisted-pair cable is to join two ports and only one of the ports has an internal crossover (MDI-X), the two pairs of wires must be straight-through.

Straight-Through RJ-45 Pin Assignments	
End 1	End 2
1 (Tx+)	1 (Tx+)
2 (Tx-)	2 (Tx-)
3 (Rx+)	3 (Rx+)
6 (Rx-)	6 (Rx-)

Crossover Wiring

If the twisted-pair cable is to join two ports and either both ports are labeled with an “x” (MDI-X) or neither port is labeled with an “x” (MDI), a crossover must be implemented in the wiring.

Crossover RJ-45 Pin Assignments	
End 1	End 2
1 (Tx+)	3 (Rx+)
2 (Tx-)	6 (Rx-)
3 (Rx+)	1 (Tx+)
6 (Rx-)	2 (Tx-)

Console Port Pin Assignments

The DB-9 serial port on the switch's rear panel is used to connect to the switch for out-of-band console configuration. The on-board menu-driven configuration program can be accessed from a terminal, a PC running a terminal emulation program, or from a remote location via a modem connection. The pin assignments used to connect to the serial port are provided in the following tables.

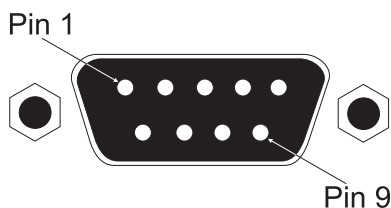


Figure B-2. DB-9 Console Port Pin Numbers

DB-9 Port Pin Assignments

EIA Circuit	CCITT Signal	Description	Switch's DB9 DTE Pin #	PC DB9 DTE Pin #	Modem DB25 DCE Pin #	Signal Direction DTE-DCE
CF	109	DCD (Data Carrier Detected)	1	1	8	<-----
BB	104	RxD (Received Data)	2	2	3	<-----
BA	103	TxD (Transmitted Data)	3	3	2	----->
CD	108.2	DTR (Data Terminal Ready)	4	4	20	----->
AB	102	SG (Signal Ground)	5	5	7	-----
CC	107	DSR (Data Set Ready)	6	6	6	<-----
CA	105	RTS (Request-to-Send)	7	7	4	----->
CB	106	CTS (Clear-to-Send)	8	8	5	<-----
CE	125	RI (Ring Indicator)	9	9	22	<-----

Console Port to 9-Pin COM Port on PC

Switch's 9-Pin Serial Port	CCITT Signal	PC's 9-Pin COM Port
1 DCD	----- DCD -----	1
2 RXD	<----- TXD -----	3
3 TXD	----- RXD ----->	2
4 DTR	----- DSR ----->	6
5 SGND	----- SGND -----	5
6 DSR	----- DTR -----	4
7 RTS	----- CTS ----->	8
8 CTS	<----- RTS -----	7
9 RI	----- RI -----	9

Console Port to 25-Pin DCE Port on Modem

Switch's 9-Pin Serial Port	CCITT Signal	Modem's 25-Pin DCE Port
1	<----- DCD -----	8
2	<----- RXD -----	3
3	----- TXD ----->	2
4	----- DTR ----->	20
5	----- SGND -----	7
6	<----- DSR -----	6
7	----- RTS ----->	4
8	<----- CTS -----	5
9	<----- RI -----	22

Console Port to 25-Pin DTE Port on PC

Switch's 9-Pin Serial Port	Null Modem		PC's 25-Pin DTE Port
1 DCD	1	1	8 DCD
2 RXD	2	3	3 TXD
3 TXD	3	2	2 RXD
4 DTR	4	8	20 DTR
5 SGND	5	20	7 SGND
6 DSR	6	7	6 DSR
7 RTS	7	4	4 RTS
8 CTS	9	5	5 CTS
9 RI	20	6	22 RI

CABLES

APPENDIX C

SPECIFICATIONS

Physical Characteristics

Ports

48 10BASE-T/100BASE-TX, with auto-negotiation
2 slots for optional dual-port 100BASE-FX or single-port
1000BASE-SX media expansion modules

Network Interface

10BASE-T: RJ-45 (100-ohm, UTP cable; Categories 3, 4, 5)
100BASE-TX: RJ-45 (100-ohm, UTP cable; Category 5)
Ports 1-48: RJ-45 connectors, fixed crossover
100BASE-FX: SC connector
Multimode fiber cable; 62.5/125 or 50/125 microns
1000BASE-SX: SC connector
Multimode fiber cable; 62.5/125 or 50/125 microns

Buffer Architecture

128 Kbytes per 10/100 Mbps ports
2 Mbytes per 1000 Mbps ports

Aggregate Bandwidth

13.6 Gbps

Switching Database

12K MAC address entries

LEDs

System: Power, RDP, Mgmt
Port: Mode (flow control, full duplex, activity),
Link (speed, link, disable/partition)

SPECIFICATIONS

Weight

9.92 lbs (4.5 kg)

Size

17.37 x 13.38 x 3.46 in (44.0 x 35.3 x 8.8 cm)

Temperature

Operating: 32 to 122°F (0 to 50°C)

Storage: -40 to 158°F (-40 to 70°C)

Humidity

Operating: 10% to 90%

AC Input

100 to 240 V, 50 to 60 Hz

Power Supply

Internal, auto-ranging transformer: 100 to 240 VAC, 50 to 60 Hz

Redundant DC input

Power Consumption

90 Watts maximum

Heat Dissipation

358 BTU/hr maximum

Maximum Current

0.80A @ 110VAC, 0.50A @ 240VAC

Switch Features

Spanning Tree Protocol

Forwarding Mode

Store-and-forward

Throughput

Wire speed

Flow Control

Full Duplex: IEEE 802.3x

Half Duplex: Back pressure

Broadcast Storm Control

VLAN Support

Up to 256 groups; port-based or with 802.1Q VLAN tagging,
GVRP for automatic VLAN learning

Multicast Switching

IGMP Snooping

Quality of Service

Supports two levels of priority and Weighted Fair Queueing

Management Features

In-Band Management

Telnet, Web-based HTTP, or SNMP manager
(EliteView Network Management software provided for free)

Out-of-Band Management

RS-232 DB-9 console port

Software Loading

TFTP in-band or XModem out-of-band

MIB Support

MIB II (RFC 1213), Bridge MIB (RFC 1493), Ethernet-Like MIB (RFC 1643), RMON MIB (RFC 1757), SMC's private MIB

RMON Support

Groups 1, 2, 3, 9 (Statistics, History, Alarm, Event)

Additional Features

Port Trunks
Port Mirroring

Standards

IEEE 802.3 Ethernet
IEEE 802.3u Fast Ethernet
IEEE 802.3z Gigabit Ethernet
IEEE 802.1D Spanning Tree Protocol
IEEE 802.1p priority tags
IEEE 802.3ac VLAN tagging
IEEE 802.1Q VLAN Bridge Management
IEEE 802.3x full-duplex flow control
ISO/IEC 8802-3
SNMP (RFC 1157), RMON (RFC 1757), ARP (RFC 826),
IGMP (RFC 1112), MIB II (RFC 1213), Interfaces Evolution MIB
(RFC 1573), Ethernet-Like MIB (RFC 1643), Bridge MIB (RFC 1493)

Compliances

CE Mark

Emissions

FCC Class A
Industry Canada Class A
EN55022 (CISPR 22) Class A
VCCI Class A
C-Tick - AS/NZS 3548 (1995) Class A

Immunity

IEC 1000-4-2/3/4/6

Safety

CSA/NRTL (CSA 22.2.950 & UL 1950)
EN60950 (TÜV/GS)

SPECIFICATIONS

Warranty

Limited lifetime

Slide-in Module

100BASE-FX Extender Module

Model

SMC6900FSC, SMC6900FST

Ports

2 100BASE-FX

Network Interface

SC connector, 50/125 or 62.5/125 micron multimode fiber cable
(SMC6900FST includes SC-ST Converter)

Standards

802.3u Fast Ethernet

1000BASE-SX Extender Module

Model

SMC6900G

Ports

1 1000BASE-SX

Network Interface

SC connector, 50/125 or 62.5/125 micron multimode fiber cable

Standards

802.3z Gigabit Ethernet

Network Management Module

Model

SMC6948NMM

Ports

RS-232 console port

APPENDIX D

ORDERING INFORMATION

TigerSwitch 10/100 Products and Accessories	
Product Number	Description
SMC6948L2	48-port Fast Ethernet Switch with two media expansion slots
SMC6900FSC	Fiber Module with two 100BASE-FX Ports (SC-type Connector)
SMC6900FST	SMC6900FSC + SC-ST Converter
SMC6900G	Gigabit Module with one 1000BASE-SX Port (SC-type Connector)
99-012034-091	SC to ST plug converter for fiber optic module
SMCRPU150W*	Redundant Power Unit with cables, supports one device

* Also available in models for Continental Europe and the UK.

ORDERING INFORMATION

GLOSSARY

10BASE-T

IEEE 802.3 specification for 10 Mbps Ethernet over two pairs of Category 3, 4, or 5 UTP cable.

100BASE-FX

IEEE 802.3u specification for 100 Mbps Fast Ethernet over two strands of 50/125 or 62.5/125 micron core fiber cable.

100BASE-TX

IEEE 802.3u specification for 100 Mbps Fast Ethernet over two pairs of Category 5 UTP cable.

1000BASE-SX

IEEE 802.3z specification for Gigabit Ethernet over two strands of 50/125 or 62.5/125 micron core fiber cable.

Auto-Negotiation

Signalling method allowing each node to select its optimum operational mode (e.g., 10 Mbps or 100 Mbps and half or full duplex) based on the capabilities of the node to which it is connected.

Bandwidth

The difference between the highest and lowest frequencies available for network signals. Also synonymous with wire speed, the actual speed of the data transmission along the cable.

Class I Repeater

Fast Ethernet repeater that is principally used to connect different physical signaling systems (e.g., 100BASE-TX, 100BASE-FX) and that has an internal delay such that only one repeater of this type can reside within a single collision domain when maximum cable lengths are used.

Class II Repeater

Fast Ethernet repeater that typically supports a single physical signaling system (e.g., 100BASE-TX, or 100BASE-FX) and that has a smaller internal delay so that two such repeaters can reside within a single collision domain when maximum cable lengths are used.

Collision

A condition in which packets transmitted over the cable interfere with each other. Their interference makes both signals unintelligible.

Collision Domain

Single CSMA/CD LAN segment.

CSMA/CD

Carrier Sense Multiple Access/Collision Detect is the communication method employed by Ethernet and Fast Ethernet.

Crossover Port

Twisted-pair port with a built-in wiring crossover.

End Station

A workstation, server, or other device that does not act as a network interconnection.

Ethernet

A network communication system developed and standardized by DEC, Intel, and Xerox, using baseband transmission, CSMA/CD access, logical bus topology, and coaxial cable. The successor IEEE 802.3 standard provides for integration into the OSI model and extends the physical layer and media with repeaters and implementations that operate on fiber, thin coax and twisted-pair cable.

Fast Ethernet

A 100 Mbps network communication system based on Ethernet and the CSMA/CD access method.

Fast Ethernet Switch

Device that provides a full 100 Mbps bandwidth (or either 10 or 100 Mbps bandwidth with auto-negotiation) to each port (LAN segment).

Full Duplex

Transmission method that allows switch and network card to transmit and receive concurrently, effectively doubling the bandwidth of that link.

Gigabit Ethernet

A 1000 Mbps network communication system based on Ethernet and the CSMA/CD access method.

IEEE 802.3

Defines carrier sense multiple access with collision detection (CSMA/CD) access method and physical layer specifications.

IEEE 802.3u

Defines CSMA/CD access method and physical layer specifications for 100BASE-TX Fast Ethernet.

IEEE 802.3x

Defines Ethernet frame start/stop requests and timers used for flow control on full-duplex links.

IEEE 802.3z

Defines CSMA/CD access method and physical layer specifications for 1000BASE Gigabit Ethernet.

LAN Segment

Separate LAN or collision domain.

LED

Light emitting diode used for monitoring a device or network condition.

Link Segment

Length of twisted-pair or fiber cable joining a pair of repeaters or a repeater and a PC.

Local Area Network (LAN)

A group of interconnected computer and support devices.

Media Access Control (MAC)

A portion of the networking protocol that governs access to the transmission medium, facilitating the exchange of data between network nodes.

MIB

An acronym for Management Information Base. It is a set of database objects that contains information about the device.

MII

Media Independent Interface, the standard interface for Fast Ethernet—similar to the AUI interface for traditional Ethernet.

Network Diameter

Wire distance between two end stations in the same collision domain.

RJ-45 Connector

A connector for twisted-pair wiring.

Redundant Power Supply (RPS)

A backup power supply that automatically takes over in case the primary power supply should fail.

Straight-through Port

An RJ-45 port which does not cross the receive and transmit signals internally so it can be connected with straight-through twisted-pair cable to any device having a crossover port. Also referred to as a “Daisy-Chain” port.

Switched Ports

Ports that are on separate collision domains or LAN segments. Transmission Control Protocol/Internet Protocol (TCP/IP) Protocol suite that includes TCP as the primary transport protocol, and IP as the network layer protocol.

UTP

Unshielded twisted-pair cable.

Numerics

- 10 Mbps connectivity rules 2-8
- 100 Mbps connectivity rules 2-7
- 1000 Mbps connectivity rules 2-6
- 1000BASE-SX
 - connections 4-4
 - fiber cable lengths 2-6
 - modules 1-7
- 100BASE cable lengths 2-7
- 100BASE-FX
 - connections 4-4
 - fiber 2-6
- 100BASE-TX ports 1-3
- 10BASE cable lengths 2-8
- 10BASE-T ports 1-3

A

- accessories, ordering D-1
- address table size C-1
- adhesive feet, attaching 3-5
- agent module 1-5
- air flow requirements 3-1
- applications 2-2
 - central wiring closet 2-3
 - collapsed backbone 2-2
 - remote connections with fiber 2-4
 - VLAN connections 2-5

B

- brackets, attaching 3-4
- broadcast storm control 1-5
- buffer size C-1
- buffers, saturation of 1-3

C

- cable
 - lengths 2-6, 2-7, 2-8
 - specifications B-1
- CE Mark i
- cleaning fiber terminators 4-4
- compliances i
 - EMC C-5
 - safety C-5
- connectivity rules
 - 10 Mbps 2-8
 - 100 Mbps 2-7
 - 1000 Mbps 2-6
- console port 1-5
 - pin assignments B-5
- contents of package 3-2
- cooling problems A-2
- cord sets, international 3-6

D

- DC input 1-8
- desktop mounting 3-5
- device connections 4-1

E

- EC conformance i
- electrical interference, avoiding 3-1
- EMC/safety compliance i
- equipment checklist 3-2
- Ethernet connectivity rules 2-8

F

- Fast Ethernet connectivity rules 2-7
- fault tolerance, Spanning Tree 1-6
- FCC compliance i

INDEX

- features C-3
 - management 1-10
 - switch 1-9
- fiber cables 4-4
- flow control, IEEE 802.3x 1-3
- front panel of switch 1-1
- full-duplex connectivity 2-1

G

- Gigabit Ethernet cable lengths 2-6
- grounding for racks 3-3
- GVRP 1-5

I

- IEEE 802.3x flow control 1-3
- indicators, LED 1-4
- installation
 - connecting devices to the switch 4-2
 - desktop or shelf mounting 3-5
 - installing optional modules 3-3
 - port connections 4-2, 4-4
 - power requirements 3-1
 - problems A-2
 - rack mounting 3-3
 - RPUs in racks 3-5
 - site requirements 3-1
 - wiring closet connections 4-3

L

- laser safety iii, 4-4
- LED indicators
 - Activity 1-4
 - FDX 1-4
 - Mgmt 1-4
 - problems A-1
 - PWR 1-4

- RDP 1-4
- limited warranty C-6
- location requirements 3-1

M

- management
 - agent 1-3
 - features 1-10, C-4
 - module 1-5
 - out-of-band 1-3, 1-5
 - SNMP 1-3
 - Telnet 1-6
 - Web-based 1-3
- MIB support C-4
- modules
 - 1000BASE-SX 1-7, C-7
 - 100BASE-FX C-7
 - slide-in C-7
 - Stack C-8
- mounting the switch
 - in a rack 3-3
 - on a desktop or shelf 3-5
- multicast switching 1-7
 - IGMP 1-7
 - IGMP Snooping 1-7
- multimode fiber optic cables 4-4

N

- network
 - connections 4-2, 4-4
 - examples 2-2
- null-modem cable 1-5

O

- optional
 - modules 1-2, C-7
 - modules, installation 3-3

optional equipment D-1
 ordering information D-1
 out-of-band management 1-3, 1-5

P

package contents 3-2
 pin assignments B-2
 100BASE-TX/10BASE-T B-3
 25-pin DCE port B-6
 25-pin DTE port B-7
 console port B-5
 DB-9 B-5
 port saturation 1-3, 1-5
 port-based VLANs 2-5
 ports, connecting to 4-2, 4-4
 power, connecting to 3-6
 priority queues 1-7
 problems, troubleshooting A-1

Q

QoS 1-5

R

rack mounting 3-3
 rear panel of switch 1-2
 rear panel receptacles 1-8
 redundant power unit
 See RPU
 RJ-45 port connections 4-2
 RJ-45 ports 1-3
 RMON 1-3
 routing applications 2-9
 RPU 1-8, D-1
 connecting 3-6
 installing in a rack 3-5
 installing on a desktop 3-5
 RS-232 port 1-5

rubber foot pads, attaching 3-5

S

safety compliance iii
 sample applications 2-2
 SC port connections 4-4
 screws for rack mounting 3-2
 SC-ST Converter 1-7, 4-4, 4-5, D-1
 serial port 1-5
 site selection 3-1
 SNMP agent 1-3
 Spanning Tree Protocol 1-6, 2-5, 4-1
 specifications
 compliances C-5
 environmental C-2
 physical C-1
 power C-2
 standards
 compliance i, C-5
 IEEE C-5
 status LEDs 1-4
 surge suppressor, using 3-1
 switch architecture 1-2
 switching, introduction to 2-1

T

tags
 priority 1-7
 VLAN 2-5
 Telnet 1-6, A-3
 temperature within a rack 3-3
 traffic priority 1-7
 troubleshooting
 in-band access A-2
 power and cooling problems A-2
 switch indicators A-1
 twisted-pair connections 4-2

INDEX

U

UL compliance iii

V

VCCI compliance ii

VLANs 1-5, 1-6, 2-5
tagging 2-5

W

warranty C-6

Web-based management 1-3

Weighted Fair Queuing 1-7

FOR TECHNICAL SUPPORT, CALL:

From U.S.A. and Canada (8:30 AM - 8:00 PM Pacific Time)
(800) SMC-4-YOU; (949) 707-2400; (949) 707-2460 (Fax)
From Europe (8:00 AM - 5:30 PM UK Greenwich Mean Time)
44 (0) 1189 748740; 44 (0) 1189 748741 (Fax)

INTERNET

E-mail addresses:

techsupport@smc.com
european.techsupport@smc-europe.com

Driver updates:

<http://www.smc.com/support.html>

World Wide Web:

<http://www.smc.com/>

FTP Site:

<ftp.smc.com>

FOR LITERATURE OR ADVERTISING RESPONSE, CALL:

U.S.A. and Canada:	(800) SMC-4-YOU;	Fax (949) 707-2460
Spain:	34-93-477-4920;	Fax 34-93-477-3774
UK:	44 (0) 1189 748700;	Fax 44 (0) 1189 748701
Southern Europe:	33 (1) 41.18.68.68;	Fax 33 (1) 41.18.68.69
Central/Eastern Europe:	49 (0) 89 92861-200;	Fax 49 (0) 89 92861-230
Nordic:	46 (8) 564 33145;	Fax 46 (8) 87 62 62
Middle East:	971-48818410;	Fax 971-48817993
South Africa:	27 (0) 11-3936491;	Fax 27 (0) 11-3936491
PRC:	86-10-6235-4958;	Fax 86-10-6235-4962
Taiwan:	886-2-2747-4780;	Fax 886-2-2747-9220
Asia Pacific:	(65) 238 6556;	Fax (65) 238 6466
Korea:	82-2-553-0860;	Fax 82-2-553-7202
Japan:	81-45-224-2332;	Fax 81-45-224-2331
Australia:	61-2-9416-0437;	Fax 61-2-9416-0474
India:	91-22-8204437;	Fax 91-22-8204443

SMC[®]

Networks

6 Hughes

Irvine, CA 92618

Phone: (949) 707-2400

Model Number: SMC6948L2

Publication Number: F2.22 150550-102 E122000-R01